



### 1. Lock the driver in the bottom part.

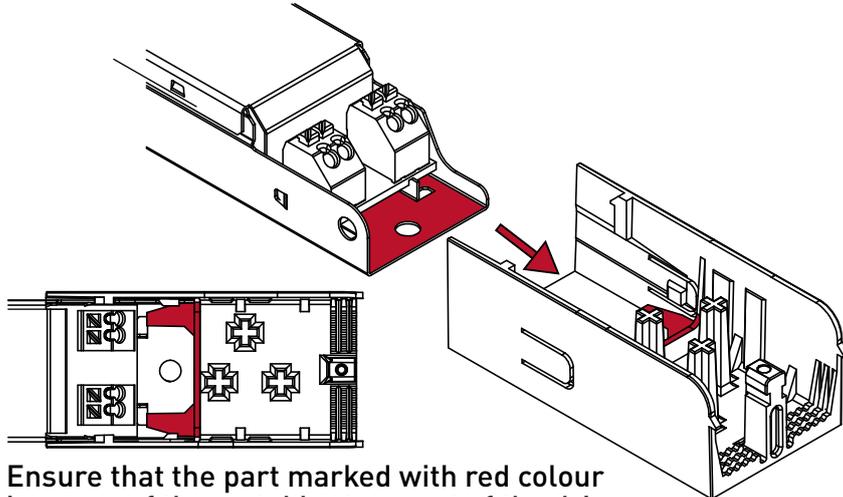


Ensure that the part marked with red colour is on top of the metal bottom part of the driver.

### 2. Connect wires according to driver datasheet.

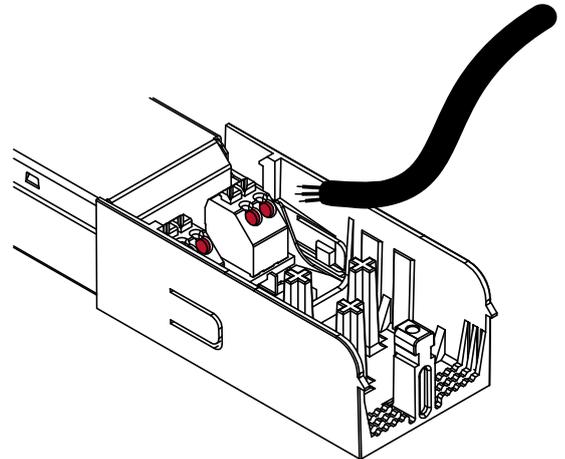


### 3. Examples for cable mounting into strain relief:

H03VV-F 2x0,75 mm<sup>2</sup>

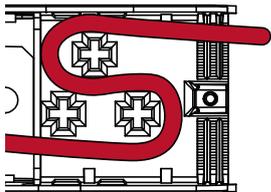


H05VV-F 3x1,0 mm<sup>2</sup>  
MMJ 3x1,5 mm<sup>2</sup>

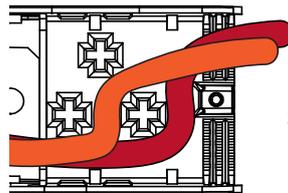

Up to 9mm

Ensure that the cable is firmly and securely mounted into the strain relief!


MMJ 5x1.5 mm<sup>2</sup>

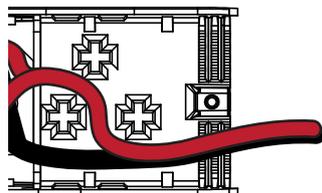

Up to 10-11mm

Make sure to fasten the screw in step 5, if connected as the black cable.

### 4. Lock the cover on the bottom part.

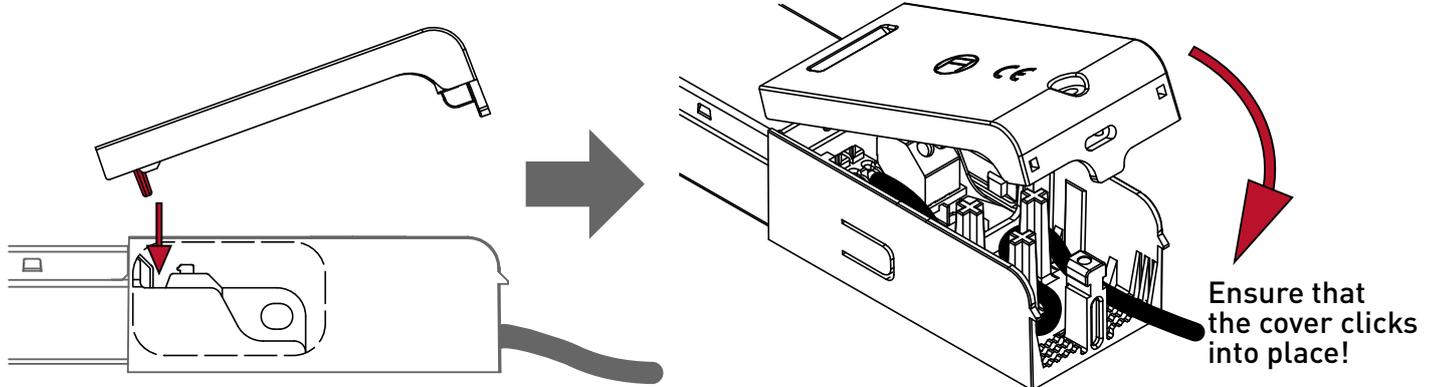

### 5. Optional when needed. (Screws supplied in the strain relief package)

