



LC-SR-MINI-LOOP

Strain Relief Installation Guide


1. Open the strain relief cover.
Install the strain relief, bottom first and cover open to the driver.

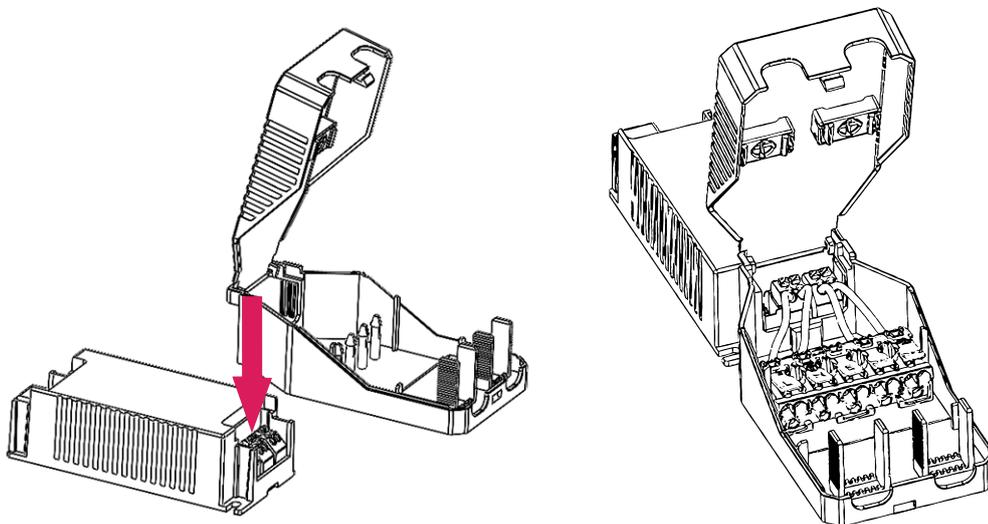

2. Connect L/N cables in on /off & Freedom models and L/N/DA1/DA2 cables in DALI models to the 5-place connector. Ensure that the cables are firmly and securely mounted into the connector!

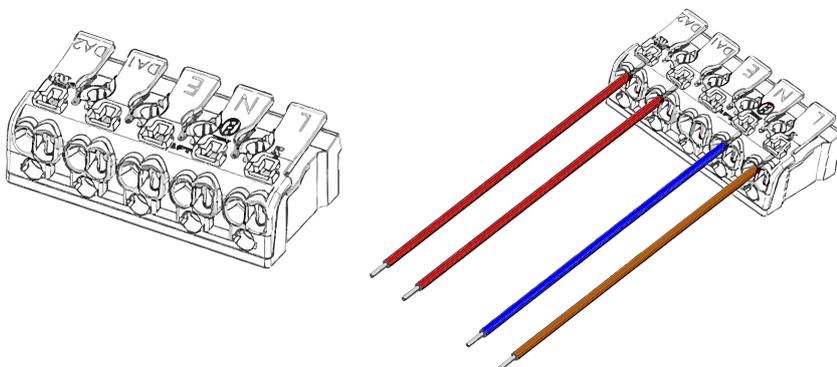


3. Connect the cables to the driver input into corresponding terminals. Ensure that the cables are firmly mounted.

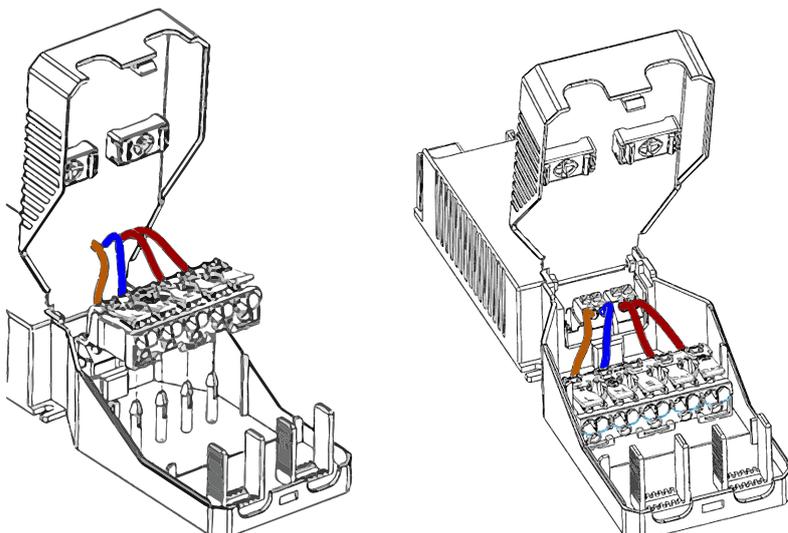



LC-SR-MINI-LOOP Strain Relief Installation Guide

4. Press the connector to the strain relief. Ensure that the connector locks into place.

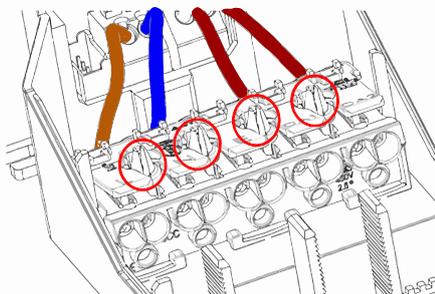


5. Connect wires into correct terminals according to driver datasheet instructions. Lock wires with the cable clamps by pressing them to place at the cable sheath.

Note: The cable clamps are located inside the cover!
Once the cable clamps are put to place they can't be removed!

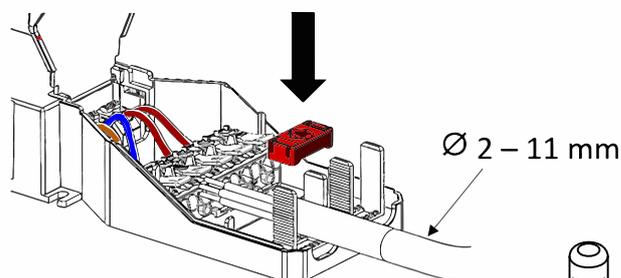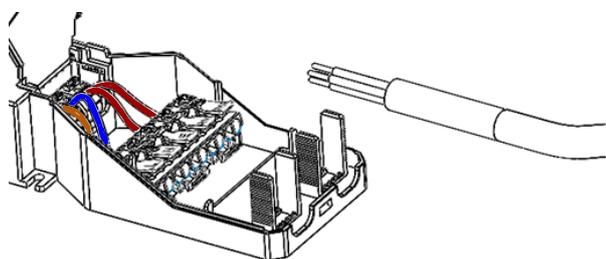

Ensure that cables are tightly locked.
It's recommended to use tool
to push the clamp

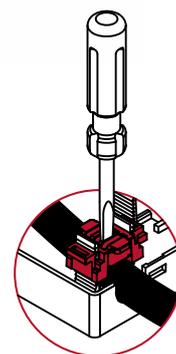

6. Lock the cover on the bottom part.

