## 80 W Dimmable DALI-2 LED driver

- DALI-2 certified LED driver, 1-100 % dimming range
- Very low current ripple and amplitude dimming technology for the highest quality light output, complying with IEEE 1789 recommendations
- NFC technology for wireless programming
- D4i compatible Smart Data features (DALI 251-253)
- Suitable for emergency lighting applications with central battery systems (e.g. Eaton-CEAG, Inotec), AC/DC input recognition
- Corridor Control feature for simple presence sensor applications
- Helvar Driver Configurator (HDC) support
- Ideal solution for Class I luminaires, suitable for Class II luminaires too\*

### \*See page 6 for details.





#### **Functional Description**

- Adjustable constant current output: 100 to 800 mA
- Current setting adjustable via DIP switch (default), or then programmable via NFC / DALI
- Four output current options via DIP switch: 350 mA (default) / 500 mA / 700 mA / 800 mA
- The output current can be set in a fixed way with with Helvar Driver Configurator (HDC) and DIP switch position ignored
- Innovative Smart Switch technology: the DIP switch current values for different positions can also be programmed by the user in HDC to differ from the factory defaults and driver will follow this in output current setting
- D4i compatible Smart Data features, e.g. OEM customer and luminaire data, energy reporting, diagnostics and maintenance
- Built-in adjustable internal thermal protection to actively reduce the output current in case of extreme temperatures
- Amplitude dimming technology for the highest quality light in every application
- Flicker-free light output suitable for camera recording applications
- Latest Switch-Control 2 technology for easy-to-use intensity control
- · Corridor Control for straightforward lighting control with e.g. external sensors with built-in relay
- Constant Light Output (CLO), adjustable up to 100 000 h (default disabled)

#### Mains Characteristics

Efficiency (n) at full load

	Nominal rated voltage ran	ge	220 V – 240 V, C	) / 50 – 60 Hz		
	AC voltage range		198 VAC - 264 V	VAC		
			Withstands ma	x. 320 VAC (max. 1 ho	ur)	
	DC voltage range		176 VDC - 280	VDC		
	DC starting voltage		> 186 VDC			
	Mains current at full load		0.36 – 0.41 A			
	Frequency		0 / 50 Hz – 60 H	łz		
	Stand-by power consumpt	ion	< 0.36 W			
	THD at full power		< 10 %			
	Leakage current to earth		< 0.5 mA			
	Tested surge protection		1 kV L-N, 2 kV I	_/N-GND (IEC 61000-	4-5)	
	Tested fast transient prote	ction	2 kV (IEC 61000	)-4-4)		
Insu	lation between circu	iits & driver case	•			
	Mains circuit - Output		Non-isolated			
	DALI circuit - Output		Basic insulation	า		
	Mains circuit - DALI circuit	:	Basic insulation	า		
	Mains, DALI and output - D	)river case	Basic insulation	า		
Loa	d Output (non-isolate	ed)				
	Output current					
	Accuracy		±5%			
	Ripple		< 1 %* at ≤ 120	Hz *) Low frequency, LED I	oad: Cree XP-G LEDs	
	PstLM		≤ 0.12*			
	SVM		≤ 0.01*	*) At full power, measu	red with Cree XP-G LED modu	les.
	U <sub>out</sub> (max) (abnormal)		350 V			
	EOFx (EL use)		15 %*	*) By default setting, av	ailable range 1100 %	
	1	100 4		E00 A	700 4	000 1
	I <sub>LED*</sub>	100 mA	350 mA (default)	500 mA	700 mA	800 mA
	$P_{Rated^*}$	3.532 W	12.2580 W	17.580 W	24.580 W	2880 W
	$U_{LED^*}$	35 – 320 V	35 – 228 V	35 – 160 V	35 – 114 V	35 – 100 V
	PF ( $\lambda$ ) at full load	0.92	0.98	0.98	0.98	0.98

93 %

92 %

Product code: 5758 80 W 220 - 240 V 0 / 50 - 60 Hz

Service States


Helvar Components | Helvar Components Oy Ab, Yrittäjäntie 23, FI-03600 Karkkila, Finland. www.helvarcomponents.com Data is subject to change without notice

93 %


89 %


92 %

#### Operating window & driver performance

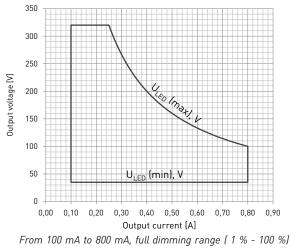

available in the whole area.

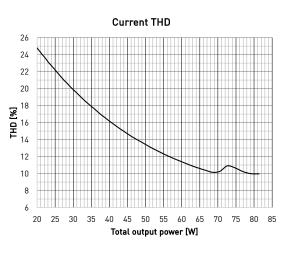

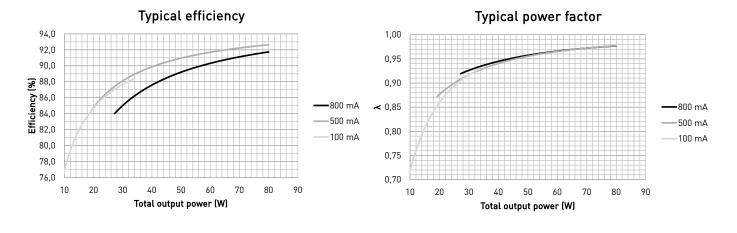

### **Operating Conditions and Lifetime**

Absolute highest allowed t<sub>c</sub> point temperature Ambient temperature range Storage temperature range Maximum relative humidity 85 °C -40 °C ... +50 °C\* -40 °C ... +80 °C No condensation

\*) Below -30 °C DALI performance might be limited, and DALI voltage must be > 12 V in the driver terminals. Below -35 °C mains switching is not allowed.

For other than independent use, higher t<sub>a</sub> of the controlgear possible as long as highest allowed t<sub>c</sub> point temperature is not exceeded.

## Lifetimes

Lifetime tables (90 % survival rate)

#### Metallic luminaires (built-in use)

Output current	Ta	55 °C	60 °C	65 °C	70 °C
100 mA	Tc at full load	64 °C	69 °C	74 °C	79 °C
	Lifetime	>100 000 h	>100 000 h	85 000 h	66 000 h
350 mA	Tc at full load	67 °C	72 °C	77 °C	82 °C
	Lifetime	>100 000 h	87 000 h	60 000 h	46 000 h
500 mA	Tc at full load	68 °C	73 °C	78 °C	83 °C
	Lifetime	>100 000 h	85 000 h	58 000 h	43 000 h
700 mA	Tc at full load	68 °C	73 °C	78 °C	83 °C
	Lifetime	>100 000 h	85 000 h	58 000 h	43 000 h
800 mA	Tc at full load	68 °C	73 °C	78 °C	83 °C
	Lifetime	>100 000h	82 000 h	54 000 h	42 000 h

The shown t<sub>c</sub> temperatures and lifetimes were measured in reference conditions i.e. metallic luminaire design and built-in use.


#### Non-metallic luminaires (built-in use)

Output current	Та	40 °C	45 °C	50 °C
100 mA	Tc at full load	60 °C	65 °C	70 °C
	Lifetime	> 100 000 h	> 100 000 h	> 100 000 h
350 mA	Tc at full load	67 °C	72 °C	77 °C
	Lifetime	> 100 000 h	93 000 h	65 000 h
500 mA	Tc at full load	68 °C	73 °C	78 °C
	Lifetime	> 100 000 h	90 000 h	65 000 h
700 mA	Tc at full load	70 °C	75 °C	80 °C
	Lifetime	> 100 000 h	80 000 h	60 000 h
800 mA	Tc at full load	73 °C	78 °C	83 °C
	Lifetime	100 000 h	70 000 h	50 000 h

The shown t<sub>c</sub> temperatures and lifetimes were measured in non-metallic luminaire design and built-in use.

The shown Tc temperatures for each Ta environment in the table above are for guidance only, as the real relation between Ta and Tc depends always on the luminaire design. In built-in use, refer to the used output current and Tc for lifetime estimation. Never exceed the Tc maximum of the driver stated in the datasheet!


## Amplitude dimming technology

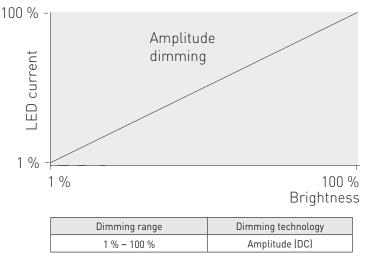

LL80HE-DA-100-800 LED driver implements amplitude dimming technology across whole dimming range. Amplitude dimming offers the best available technology for dimming the light output in an accurate and flicker-free way to ensure high quality lighting in even the most demanding situations such as camera recording applications. Amplitude dimming technology complies with IEEE 1789-2015 recommendations of current modulation to mitigate health risks to viewers.

## Wireless configuration

LL80HE-DA-100-800 LED driver is equipped with NFC wireless technology for effortless configuration of the driver via Helvar Driver Configurator Support. Helvar Driver Configurator enables easy-to-use automatic configuration of the driver parameters via NFC, without mains or DALI connection to the driver. The most popular MD-SIG qualified NFC readers are supported giving flexibility for the operator. For further information about the usage with Helvar Driver Configurator, please see the user guide at www.helvarcomponents.com

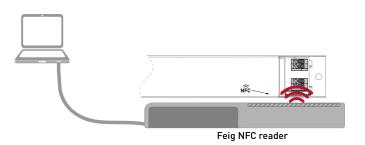

## Quantity of drivers per miniature circuit breaker 16 A Type C

Based on inr	ush current l <sub>peak</sub>	Typ. peak	inrush current I <sub>peak</sub>	1/2 value time, ∆t	Calculated energy, $I_{peak}^{2}\Delta t$
47	47 pcs		37 A	147 µs	0.1449 A²s
CONVERSIO	N TABLE FOR	OTHER T	YPES OF MINIATU	RE CIRCUIT BREAKER	
	Relative quantity of LED drivers			I (A	∿↑
B 10 A	37 %			Ipeal	* † <u>-</u>
B 16 A	60 %				
B 20 A	75 %			1/2 Ipeal	
C 10 A	62 %			72 ipca	
C 16 A	100 % (see table ab	oove)			
C 20 A	125 %				

#### CONTINOUS CURRENT

Total continous current of the drivers and installation environment must always be considered and taken into calculations when installing drivers behind miniature circuit breaker. Example calculation of total drivers amount limited by continous current:  $n(I_{cont}) = (16 \text{ A} (I_{nom, Ta}) / \text{``nominal mains current with full load''}) \times 0.76)$ . This calculation is an example according to recommended precautions due to multiple adjacent circuit breakers (> 9 MCBs) and installation environment (T<sub>a</sub> 30 degrees); variables may vary according to the use case. Both inrush current and continous current calculations are based on ABB S200 series circuit breakers. More specific information in ABB series S200 circuit breaker documentation.

NOTE! Type C MCB's are strongly recommended to use with LED lighting. Please see more details in "MCB information" document in each driver product page in "downloads & links" section.

Helvar Components | Helvar Components Oy Ab, Yrittäjäntie 23, FI-03600 Karkkila, Finland. <u>www.helvarcomponents.com</u> T22 214 1D 25.06.2024 4/8 Data is subject to change without notice.

## **Corridor Control**

Corridor Control is a feature which enables simple and cost-efficient lighting control with relay-based PIR/multisensors. Corridor Control offers straightforward install-and-forget lighting control solution, ensuring increased energy efficiency, lighting comfort and added feeling of safety in various environments. Large base of available different 3rd party PIR sensors with relay can be used in implementing a Corridor Control installation on site.

By installing an external mains voltage sensor and connecting it to the DALI terminal, the driver adapts to preset default mode to increase the light level when presence is detected, while decreasing the light level when no one is nearby anymore.

Corridor Control feature can be activated by connecting mains voltage in the DALI terminal for 55 seconds without interruption. Configuring the Corridor Control parameters is possible via Helvar Driver Configurator.

### Internal thermal protection

This LED driver has built-in active internal thermal protection. This feature protects the LED driver by limiting the maximum output current within one minute fade time when the temperature rises enough above the specified operating environment of the driver. If the temperature exceeds a certain predefined critical point, the output will be switched off and returns automatically once the temperature decreases below the threshold. The default behavior is shown in the graph on the right.

The exact triggering points vary depending of the LED driver model. By factory default, the derating point is adjusted high enough so that the feature should never be triggered below the point of Tc max temperature being exceeded and will thus not affect normal operation of the LED driver. Note that the internal measured temperature does not equal Tc temperature of the driver!


Internal thermal protection feature is enabled by default, and it can be either disabled or manually adjusted to trigger earlier if desired. Configuring the internal thermal protection is done via Helvar Driver Configurator.


## D4i-compatible Smart Data Features (DALI 251-253)

LL80HE-DA-100-800 LED driver has integrated Smart Data features, which monitor, gather and provide key data about the LED driver usage and internal parameters through DALI. This useful data provided by LED driver enables various applications and integrations into data management and IoT services, establishing the Helvar Components LED drivers as key components in the latest generation of smart luminaires.

The DALI parts 251-253 include:

- OEM Customer data (DALI part 251)
- Energy reporting (DALI part 252)
- Diagnostics and maintenance (DALI part 253)

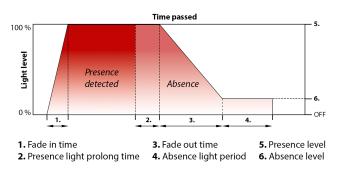

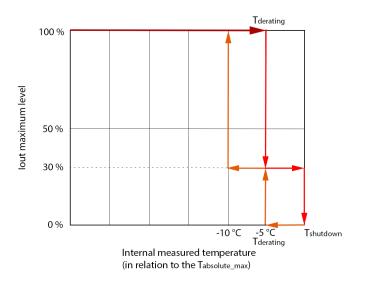


## **Connections and Mechanical Data**

Wire size
Wire type
Wire insulation
Maximum driver to LED wire length
Weight
IP rating

0.5 mm<sup>2</sup> – 1.5 mm<sup>2</sup> Solid core and fine-stranded According to EN 60598 1.5 m 268 g IP20


## Connections

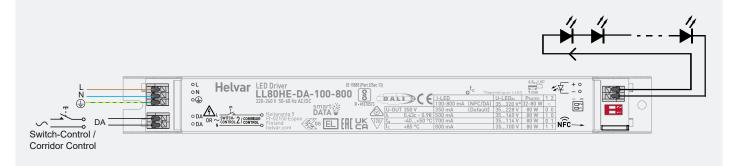

#### Note:

• Not suitable for load side switching operation

## Dimensions (mm)

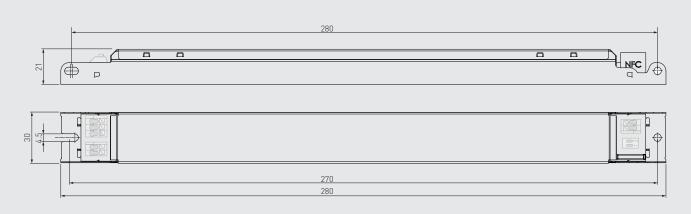

In LL80HE-DA-100-800, the current can be set in a simple way with DIP switches, when not programmed through NFC/DALI. With each combination of switch setup, a different output current value can be set. The maximum value can be reached with the DIP switch setting "11" (DIP switches pushed towards the driver body and minimum with setting "00" (pushed away from the driver body, see the connections picture above). The output current values according to the DIP switch settings are presented below.

Note: The DIP switch is always the default method for setting the output current. If the current is programmed with Helvar Driver Configurator however, the DIP switch will be ignored.

DIP switch combinations, output currents and	voltage ranges	(Nominal I <sub>out</sub> (±5 % tol.))
--	----------------	--

DIP switch combination	00 (default)	10	01	11
I <sub>out</sub> (mA)	350	500	700	800
Voltage range (V)	35 - 228	35 - 160	35 - 114	35 - 100

Helvar Components | Helvar Components Oy Ab, Yrittäjäntie 23, FI-03600 Karkkila, Finland. <u>www.helvarcomponents.com</u> T22 214 1D 25.06.2024 6/8 Data is subject to change without notice.

## Information and conformity

LL80HE-DA-100-800 LED driver is suited for built-in usage in luminaires. In order to have safe and reliable LED driver operation, the LED luminaires will need to comply with the relevant standards and regulations (e.g. IEC/EN 60598-1). The LED luminaire shall be designed to adequately protect the LED driver from dust, moisture and pollution. The luminaire manufacturer is responsible for the correct choice and installation of the LED drivers according to the application and product datasheets. Operating conditions of the LED drivers may never exceed the specifications as per the product datasheet.

### Installation & operation

#### Maximum ambient and t<sub>c</sub> temperature:

- For built-in components inside luminaires, the t<sub>a</sub> ambient temperature range is a guideline given for the optimum operating environment. However, integrator must always ensure proper thermal management (i.e. mounting base of the driver, air flow etc.) so that the t<sub>c</sub> point temperature does not exceed the t<sub>c</sub> maximum limit in any circumstance.
- Reliable operation and lifetime is only guaranteed if the maximum t<sub>c</sub> point temperature is not exceeded under the conditions of use.

#### LED driver earthing

- LL80HE-DA-100-800 LED driver is a protective Class I device and designed for Class I luminaires.
- If used inside **Class I** luminaires, this LED driver must always have the protective earth cable connected for safety reasons.
- The driver is designed to be used inside Class I luminaires. For usage inside **Class II** luminaires, the safety of the luminaire shall be ensured through double/reinforced insulation of live parts and through supplementary insulation of conductive parts of the casing, or any conductive parts connected to the casing, as the casing is only basic insulated from the live parts. The earth connector of the driver shall be left unconnected and there shall be no protective earth terminals in the luminaire terminal block to fulfill the requirements of IEC/EN 60598-1 for Class II luminaires. The EMC performance of the driver change when left unearthed, so it is always the responsibility of the integrator to take measures and necessary actions, for example by luminaire design to ensure the assembled luminaire complies with latest EMC standard.

#### **DALI** control terminals

 DALI control terminals are classified as FELV terminals and they are not safe to touch. Circuits connected to DALI terminals shall be insulated for the LV supply voltage of the controlgear and any terminals connected to the DALI circuit shall be protected against accidental contact.

#### Miniature Circuit Breakers (MCB)

- Type-C MCB's with trip characteristics in according to EN 60898 are recommended.
- Please see more details in "MCB information" document in each driver product page in "downloads & links" section.

#### Helvar Driver Configurator -support

LL80HE-DA-100-800 LED driver is supported by Helvar Driver Configurator software. With the LL80HE-DA-100-800 the output current of the driver can be programmed using the HDC software, as well as OEM customer data and parameters for features such as CLO, Corridor Control and Internal Thermal Protection. Programming the driver with Helvar Driver Configurator can be done either wirelessly via NFC or then via DALI bus.

### Lamp failure functionality

#### No load

When open load is detected, the driver will go to standby mode and remain in automatic recovery status. In automatic recovery mode, the driver will check every four seconds if the load has been reconnected. Once that happens, it returns to normal operation.

#### Short circuit

When short circuit is detected, driver will go to standby mode. It will return to normal operation through DALI light level OFF -> ON command or through mains reset.

#### Overload

When overload/voltage is detected, driver will act similarly to no load situation, it will go to standby mode and remain in automatic recovery status. In automatic recovery mode, the driver will check every four seconds if the load has been reconnected. Once that happens, it returns to normal operation.

#### Underload

When underload/voltage is detected, driver will act similarly to short circuit situation, it will go to standby power consumption status. It will return to normal operation through DALI light level OFF -> ON command or through mains reset.

#### Internal overtemperature

When the driver exceeds the Tc max operating temperature, soon above that point the driver will decrease and limit the maximum output current level. It will be decreased down to 30 % level within one minute fade time, after which in case the temperature still rises, the output of the driver will be eventually shut down. The output will be returned after the temperature drops below a certain threshold. Parameters of this feature can be adjusted via Helvar Driver Configurator, or then the feature disabled if so desired.

#### AC to DC emergency lighting mode

When AC supply is switched to DC, driver will recognise this and switch to emergency lighting mode. The light level will be adjusted to 15 % of the nominal AC operation output current by default. The DC light level cannot be adjusted or turned off by manual control or by active features, unless "DC dimming" is specifically enabled through Helvar Driver Configurator. When the AC is switched back on, the driver returns to normal operation.

Note: The internal temperature protection feature can never force the light level off or below the set emergency level in DC emergency mode.

# Information and conformity

## Switch-Control 2 & Corridor Control

#### **Use of Switch-Control functionality**

- Maximum numbers of LED drivers to be connected to one switch • is 60. Wire length is not restricted by the driver technology.
- Power on to last level mode is enabled by default, ensuring that the driver returns to the last memorized light level before mains interruption in cases of e.g. power outages.
- Ensure that all components connected to Switch-Control • circuitry are mains rated.
- If needed, the synchronisation of light levels in the Switch-Control circuit can be carried out by either of the two options:
  - Press and hold the Switch-Control switch until all lights are • ON. Then switch all lights OFF with a short press.
  - Press and hold the Switch-Control switch for 10 seconds without interruption.

#### **Use of Corridor Control**

- Activate Corridor Control feature by connecting mains voltage to the DALI terminal for 55 seconds without interruption.
- Disable Corridor Control feature by giving exactly 5 short mains voltage signal pulses (less the 350 ms) to the DALI terminal within 3 seconds.
- Ensure that all components connected to Corridor Control circuitry are mains rated.
- Default settings are described in the User Guide.

See more details in Switch-Control and Corridor Control User Guides at www.helvarcomponents.com.

#### Label symbols



Thermally controlled control gear, incorporating means of protection against overheating to prevent the case temperature under any conditions of use from exceeding 120 °C.



DALI-2 certified control gear.



Driver equipped with NFC wireless technology for effortless configuration.



Driver is capable of monitoring and measuring key data about driver usage and providing access to that data via DALI, complying with DALI parts 251-253. This includes data sets such as OEM customer data, energy reporting and diagnostics.



AC/DC supplied electronic control gear for emergency lighting purposes intended for connection to a centralized emergency power supply.



DALI (FELV) terminals are not safe to touch and are thus marked with the symbol for the risk of electric shock.



RCM (Regulatory Compliance Mark) indicates that this LED driver model is tested and verified to comply with applicable electrical safety and electromagnetic compatibility requirements in Australia and New Zealand.

## Conformity & standards

General and safety requirements	EN 61347-1
Particular safety requirements for DC or AC supplied electronic control gear for LED modules	EN 61347-2-13
Additional safety requirements for AC or DC supplied electronic controlgear for emergency lighting	EN 61347-2-13, Annex J
Thermal protection class	EN 61347, C5e
Mains current harmonics	EN IEC 61000-3-2
Limits for voltage fluctuations and flicker	EN 61000-3-3
Radio frequency interference	EN IEC 55015
Immunity standard	EN 61547
Performance requirements	EN IEC 62384
Digital addressing lighting interface:	
General requirements for DALI system	EN 62386-101 (DALI-2)
Requirements for DALI control gear	EN 62386-102 (DALI-2)
Requirements for control gear of LED modules (DALI Device Type 6)	EN 62386-207 (DALI-2)
Memory Bank 1 extension	DALI Part 251
Energy Reporting	DALI Part 252
Diagnostics & Maintenance	DALI Part 253
Recommended Practices for Modulating Current in High-Brightness LEDs for Mitigating Health Risks to Viewers	IEEE 1789-2015
Compliant with relevant EU directives	
RoHS/REACH compliant	
ENEC and CE / UKCA marked	

Suitable for emergency luminaires complying with the standard EN 60598-2-22.